



Doc # AP3-PN-032502

# Apex III

*Technical Bulletin*

## Loading PowerNet TwinClient

### *Instructions for loading PowerNet TwinClient on the Apex III*

- **On the PC containing TwinClient Manager**

1. Click 'Start'
  - a. Highlight 'Programs'
  - b. Highlight 'PowerNet'
2. Click on 'TwinClient Manager'

**Note:**

If the software is not loaded on the PC, go to  
<http://www.compsee.com/ApexIII/apexiiidownloads.htm>  
download Twin Client Manager and install on the PC.)

- **Configuring General Terminal Settings within TwinClient Manager**

**Easiest route:** Select 'File', then 'Wizard'.  
The Wizard will walk you through steps 1-12 below.

**Click on the Following -**

1. Settings
2. Emulation
3. The Emulation type desired and then click 'OK'
4. Settings
5. Servers
6. Add
  - Enter the Server Name, IP address and terminal emulation type, then click 'OK'.
7. Settings
8. Options
  - Choose 'Terminal type' and 'Radio type' desired and then click 'OK'
9. File
10. Save As
  - Enter the desired file name (e.g. Apex VT.cf )
11. Save

**National Sales Office**  
2500 Port Malabar Blvd. NE  
Palm Bay, FL 32905

800-628-3888 – V  
321-724-4321 – V  
321-723-2895 – F  
[sales@compsee.com](mailto:sales@compsee.com)

**Corporate Headquarters**  
400 N. Main St.  
Mt. Gillead, NC 27306

## • Loading Twin Client onto the Apex III

1. Click 'Terminal'
2. Click 'Send Program file to terminal'
3. Click 'Yes' to load configuration files.
4. Place Apex III in cradle, and at the 'C' prompt, type 'ld' and depress enter.
  - The LD.bat utility will run
  - Click 'OK' on the PC to begin the download transfer  
*Before beginning, make sure no other applications are running that may be accessing your PC's serial port.*
5. When download is complete, shut the Apex III down by depressing the 'FN' and the red power button.
6. The Apex III will reboot when you power back up by depressing the red power button.

## • Configuring/Editing network related settings on the Apex III

### Local IP address

1. On the Apex III keypad, depress 'SHIFT', 'C' at the TwinClient copyright screen.
2. At the Edit Functions Menu, select the 'Edit IP' option.
3. Depress 'ENTER'
4. Key in a valid IP address, subnet mask, and, if necessary, the router information. Depress 'ENTER' after each entry.
5. Depress 'F3' to Save configuration.

### Host Address

1. On the Apex III keypad, depress 'SHIFT', 'C' at the TwinClient screen.
2. At the Edit Functions Menu, arrow down to the 'Edit Host List' option.
3. Depress 'ENTER'
4. Key in the IP address of the Host to which terminal will be connected.
5. Enter the ethernet port number (typically port 23)
6. Depress 'F3' to Save configuration.

### RF Net ID/ESS ID

1. On the Apex III keypad, depress 'SHIFT', 'C' at the TwinClient screen.
2. At the Edit Functions Menu, arrow down to the 'Edit Radio' option.
3. Depress 'ENTER'
4. Key in the ID that will be used for RF network ID.
5. Depress 'F3' to Save configuration.

---

### Technical Assistance:

Users requiring Technical Assistance should contact Compsee Technical Support at **1-800-628-3888**. Technical questions can also be e-mailed to [sales@compsee.com](mailto:sales@compsee.com).

**National Sales Office**  
2500 Port Malabar Blvd. NE  
Palm Bay, FL 32905

800-628-3888 – V  
321-724-4321 – V  
321-723-2895 – F  
[sales@compsee.com](mailto:sales@compsee.com)

**Corporate Headquarters**  
400 N. Main St.  
Mt. Gilead, NC 27306